

## EverOn "AA" Battery Placement

1. Hold the EverOn so the battery cover plate is showing and the "Latch" is at the bottom and the "Tabs" are at the top of the battery cover plate. (Figure 1)
2. Press the "Latch" (on the bottom of the unit) upward and lift the battery cover plate slightly.
3. Pull the battery cover plate down until the "Tabs" are free of the base. Set the battery cover plate aside. The battery compartment is now exposed.

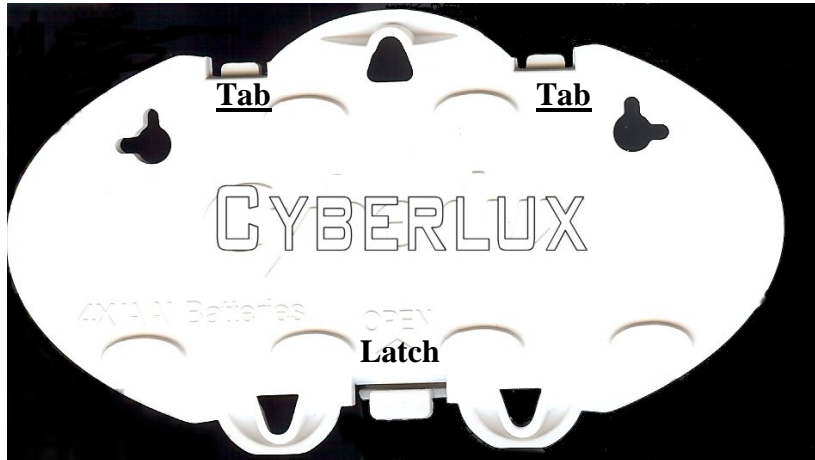


Figure 1

4. Insert the top single battery and bottom single battery with the positive (+) to the left as shown in Figure 2
5. Insert the 2 center batteries with the positive (+) to the right.
6. Replace the battery cover plate.

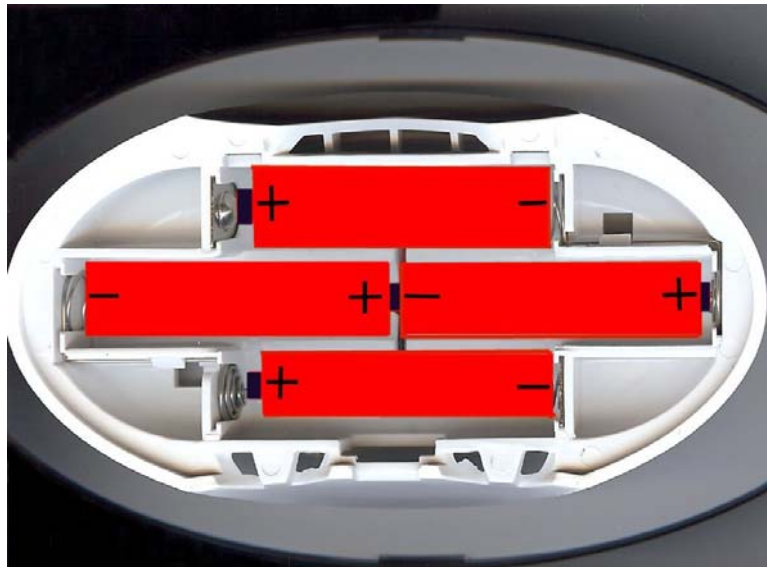


Figure 2

Alkaline batteries are recommended for the best performance. Please feel free to contact us if you experience any problems.